



JUMPER LOCATION TABLE
(SEE DETAIL "A")

	FUNCTION	OPTION DESIRED	PLACE JUMPER BETWEEN PINS
POLARITY	TIMER 2 ACTIVATE	GND ACTIVATION	2C - 3C (*)
		+12V ACTIVATION	1C - 2C
POLARITY	LOAD 2 ACTIVATE	GND ACTIVATION	2D - 3D
		+12V ACTIVATION	1D - 2D (*)
TIME DOWN SETTING	TIMER 2 ACTIVATE	5 MIN DELAY	2A - 3A & 2B - 3B
		15 MIN DELAY	(*) 2A - 3A & (*) 1B - 2B
		30 MIN DELAY	1A - 2A & 2B - 3B
		60 MIN DELAY	1A - 2A & 1B - 2B

(*) FACTORY DEFAULT

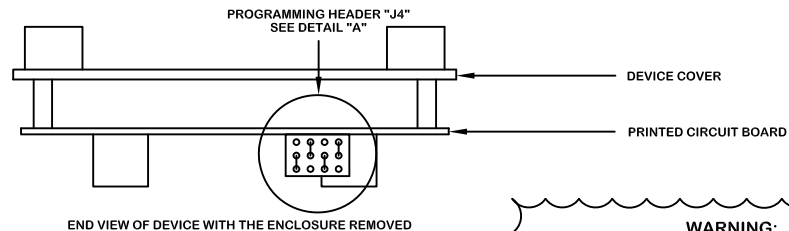

PROGRAMMING PIN HEADER "J4"

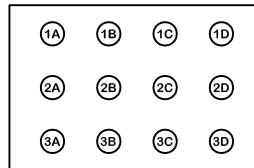

DETAIL "A"

WARNING:

DISCONNECT BOTH +12VDC SUPPLIES FROM LOAD 1 AND LOAD 2 TERMINALS BEFORE CHANGING THE POSITION OF ANY PROGRAMMING HEADER JUMPERS

DISCONNECT ALL WIRING TO MTMR TERMINALS BEFORE PERFORMING ANY TYPE OF ARC WELDING ANYWHERE IN THE VEHICLE